
4G GPS tracker Product instruction manual

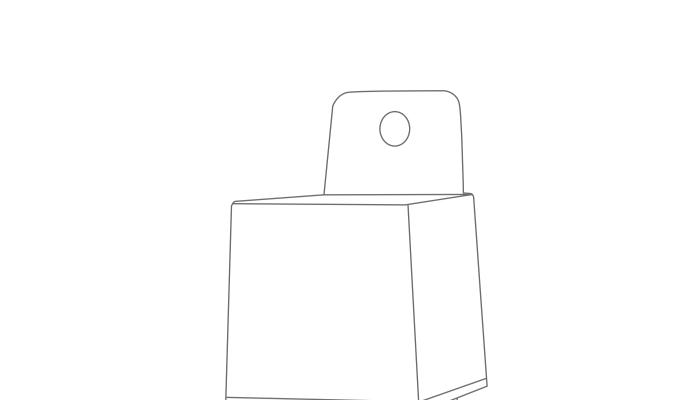

(4G GPS tracker)

Please read the instructions carefully before using this product.

This product is only used to assist the company or personal ve-

hicle management, anti-theft and other legal purposes, prohibit-

ed for detective, tracking and other illegal activities that violate

1. Product introduction 1.Name: 4G GPS tracker **2.Feature:** Position query, electronic fence, vibration alarm, track playback. (All functions

3.Use: This product is only suitable for legal

purposes such as anti-theft management of

vehicles owned by enterprises or individuals.

Quantity

1

Unit

set

set

It is prohibited to modify or for illegal activities. 4. Configuration list:

others' privacy.

Number Name 1 4G GPS tracker

are subject to the actual model)

2 card, certificate of qualification 3 Packing box 1 suit set Extension cable 4 Note: The above is the standard configuration list of the whole set of products.

Instruction manual, warranty

Accessories outside the above standard range of need to pay extra.

5. Matters needing attention:

(1) Do not immerse the product in water.

II. Specification parameter

1. Main specifications:

Frequency

Voltage

Battery

such as fire, high temperature and heat. (3) The shape and color of the equipment shall prevail. (4) It is strictly prohibited to disassemble, repair and modify products without permission.

(2) Please keep the product away from extreme environments

Main specification Master chip 4G module

4G

9-90V DC

Polymer battery 1600mAh

Blue: Network light

Support

Support

Support

Support

- 2. Main functions:

Pilot lamp Green: GPS light **GPS+BD GPS** Support G-sensor Support Voltage detection Support Playback

Open the card slot and insert a SIM card that supports Internet access.

installation diagram)

(1) GPS singal light (Green)

Light

Glowing

Flashing

Light

Note:

Common problems

Weak signal

(2) Network light (Blue)

1. Procedure of use:

III. Installation method

Electronic fence

Alarm message

Battery display

Vibration alarm

- Glowing No signal found or the SIM card is invalid Quick blink: The system is working properly Flashing Blinking slowly: The server is not connected or there is no GPRS network
- the consequences arising therefrom shall be borne by oneself.

Reasons

Test at areas where there

are high buildings or under-

ground parking lots, where

radio waves cannotbe sent

or eceived normally.

GPS no location

V. Installation instructions Positive poles

Negative poles

Battery

VI . Installation position

Installation position: Car

Behind the windshield

Near the power box

Installation position: Motorcycle Interior of large lampshade/code table accessories Inside the taillight Installation position: electromobile

2. Any of the following conditions is not covered by the warranty, but can be repaired if you pay the cost (1) Exceeding the warranty period; (2) Damage caused by unauthorized disassembly or repair without

the authorization of our company;

failure is guaranteed for one year;

User Name

Address

Model No.

Purchasing

Seller Name

Seller Address

Seller contace

number

Date

- leave the factory after passing the inspection Model: Checker:
 - Manufacturer
- Company Headquarters: **Production base:**

Company Website:

Service Hotline:

Main interface 5 PIN pins GPS ceramics and FPC Antenna Main function SIM Nano

The card is powered on automatically. The indicator light is on and the blue light blinks, indicating that is normal.

2.Light status (On the device):

Take out the terminal and accessories and connect the

Log in to the mobile APP or website to check the location.

Status

GSM no positioning

GPRS normal communication/online

Status

terminal to the vehicle in the correct way. (Attached

IV. Common problem

The main function of the relay is to control the remote switch.

The correct installation of the equipment is the premise of the

normal use of the equipment, incorrect installation will lead to

the equipment can not be used, so if you can not complete the

| installation, you need to ask a professional teacher to install. |
|------------------------------------------------------------------|
| When the vehicle is driving at high speed, please be careful to |
| use the power off function, such as use may cause accidents.All |

Solutions

Move to good signal

The regional location

used

go to outdoor place

where signal is good

OFF

Oil pump

Power cord:9V-90V

Below decorative panel

Oil pump line

Around the instrument panel

ON

| Platform map | | |
|-------------------------------------------|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| shows incorrect location | Inaccurate positioning | The GPS signal is weak in some areas, and the terminal will switch different positioning modes. The positioning difference is normal |
| The device and platform are not connected | Check whether the SIM card is normal | Contact your provider to check the status of your SIM card |
| | The SIM card is normal, but the terminal is offline | Please try to observe the status in the strong signal area |

Underseat Key switch

Warranty Card

1. One year from the date of purchase, the non-human damage

Telephone

Number

IMEI(SN)

Commercial

invoice No

(3) immersed in water and the circuit board was burnt; (4) Damage caused by improper installation, use, maintenance or storage; (5) damage of outer casing caused by the improper use; (6) The IMEI(SN) number of the product is torn or blurred; (7) The warranty card and product model No. not match, or the warranty card was altered; (8) Damage caused by force majeure. Certificate Certificate

The product is approved to

Date: