


Strong magnet tracker

Product instruction manual

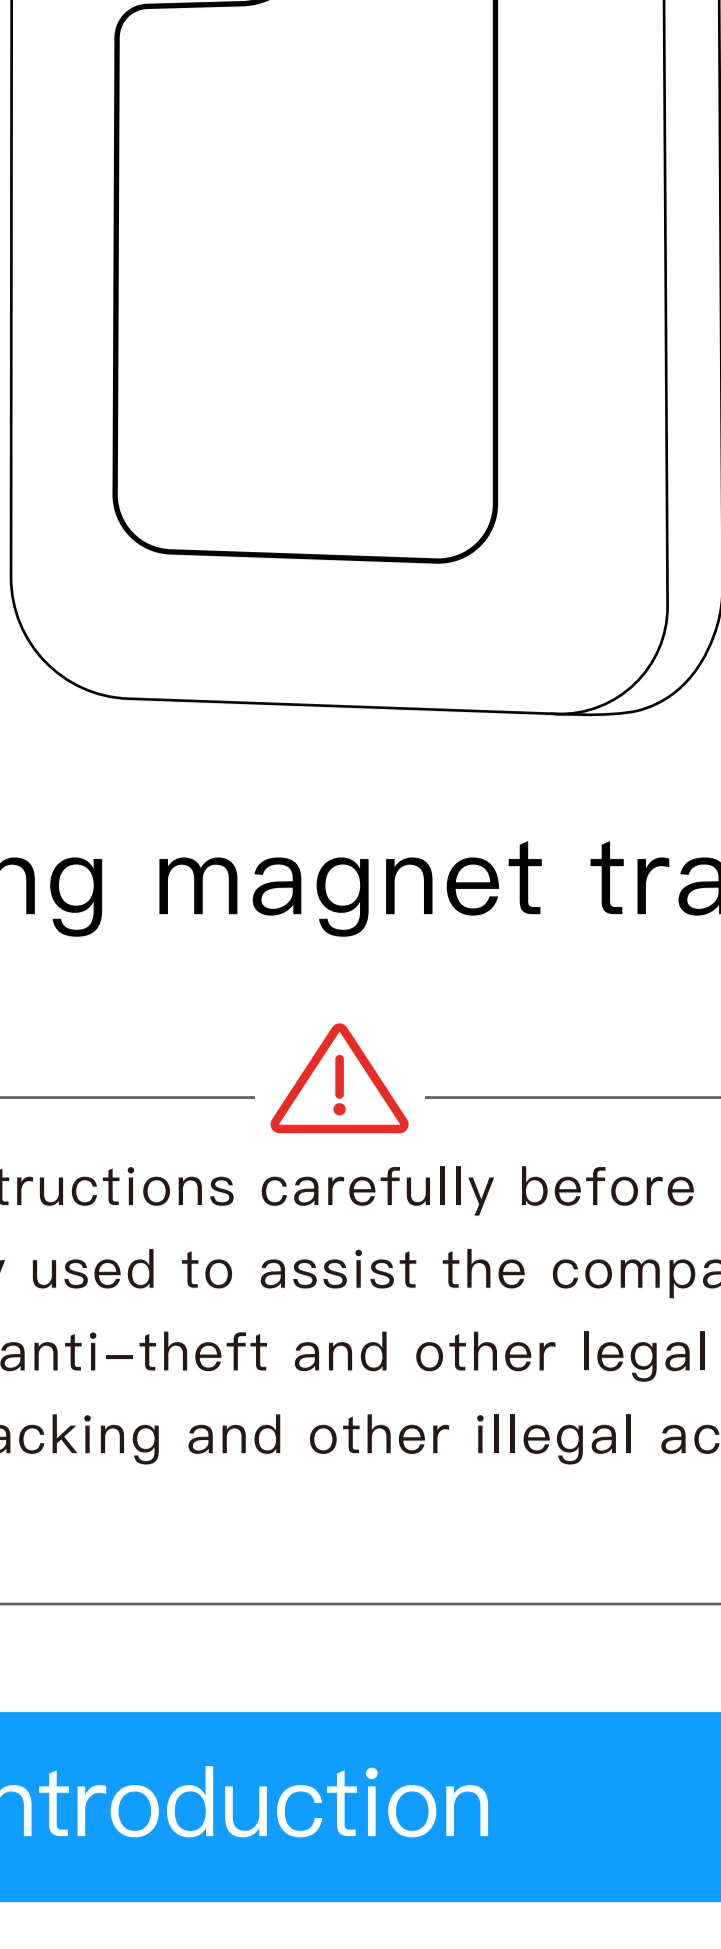

(Strong magnet tracker)



Please read the instructions carefully before using this product. This product is only used to assist the company or personal vehicle management, anti-theft and other legal purposes, prohibited for detective, tracking and other illegal activities that violate others' privacy.

I. Product introduction

1. Name: Strong magnet tracker

2. Feature: Position query, electronic fence, vibration alarm, track playback. (All functions are subject to the actual model)

3. Use: Car rental, financial risk control, logistics management and other industries

4. Configuration list:

Number	Name	Quantity	Unit
1	Strong magnet tracker	1	set
2	Instruction manual, warranty card, certificate of qualification	1	set
3	Packing box	1	suit

Note: The above is the standard configuration list of the whole set of products. Accessories outside the above standard range of need to pay extra.

5. Matters needing attention:

(1) Do not immerse the product in water.

(2) Please keep the product away from extreme environments such as fire, high temperature and heat.

(3) The shape and color of the equipment shall prevail.

(4) It is strictly prohibited to disassemble, repair and modify products without permission.

II. Specification parameter

1. Main specifications:

	Main specification
Master chip	4G module
Frequency	4G
Voltage	3.4-4.2V DC
Battery	Polymer battery: 8000mAh
Antenna	GPS ceramics and FPC
Shell	Fireproof material
Main interface	Type-C
SIM card	Nano Push self-ejecting cassette

2. Main functions:

	Main function
Battery display	Support
Positioning	Support
Playback	Support
Electronic fence	Support
Alarm message	Support
Vibration alarm	Support
Short message	Support
AGPS	Support

III. Installation method

1. Procedure of use:

● Open the card slot and insert the SIM card that supports GPRS Internet access.

● Press and hold the power button for 3 seconds to power on the device. When you see the indicator light on and the blue light blinking quickly and the green light blinking frequently, it indicates normal.

● Log in to the mobile APP or website to check the location.

2. Light status (On the device):

(1) GPS signal (Green)

Light	Status
Glowing	GSM no positioning
Flashing	GPRS normal communication/online

(2) Network light (Blue)

Light	Status
Glowing	No signal found or the SIM card is invalid
Flashing	Quick blink: The system is working properly Blinking slowly: The server is not connected or there is no GPRS network

(3) Charge light (Red)

Light	Status
Glowing	The device is being charged
Extinguish	Charge complete

IV. Common problem

Common problems

Reasons

Solutions

Weak signal Test at areas where there are high buildings or underground parking lots, where radio waves cannot be sent or received normally.

Move to good signal
The regional location used

Platform map shows incorrect location GPS no location

go to outdoor place where signal is good

Inaccurate positioning

The GPS signal is weak in some areas, and the terminal will switch different positioning modes. The positioning difference is normal

The device and platform are not connected Check whether the SIM card is normal

Contact your provider to check the status of your SIM card

The SIM card is normal, but the terminal is offline

Please try to observe the status in the strong signal area

Notes:

1) The equipment should be placed in a place with good GPS signal;

2) The equipment should be placed in a place that is not easy to corrode (waterproof measures);

3) Do not place the device directly in a place where the temperature is too high, such as: heat dissipation Near a pipe or exhaust port;

4) Ensure that the host face up, and there is no metal above the GPS signal shielding;

5) Do not fix the device on the controller, to avoid excessive temperature, battery expansion and shell deformation;

6) The equipment can not be suspended in the air in the position of long-term vibration, can be fixed with cable tie or double-sided tape.


V. Installation position

Installation position: Car

Behind the windshield

Around the instrument panel

Below decorative panel

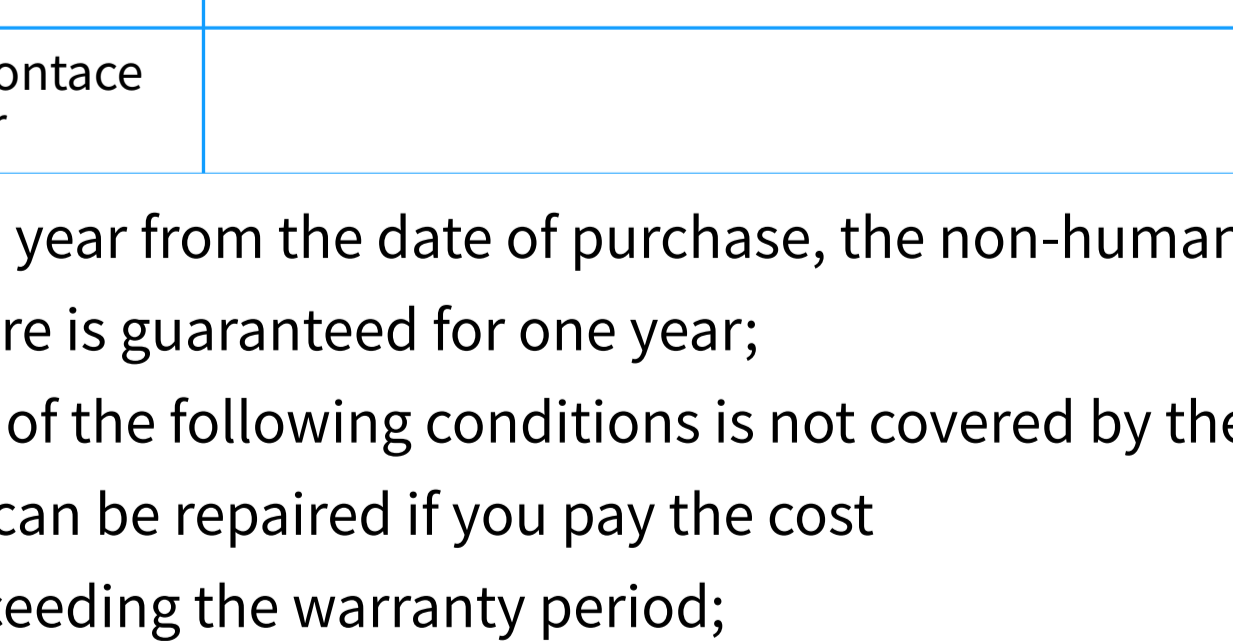

Near the power box

Installation position: Motorcycle

Inside the taillight

Interior of large lampshade/code table accessories



Installation position: electromobile

Underseat

Key switch



Warranty Card

User Name

Telephone Number

Address

Model No.

IMEI(SN)

Purchasing Date

Commercial invoice No

Seller Name

Seller Address

Seller contact number

1. One year from the date of purchase, the non-human damage failure is guaranteed for one year;

2. Any of the following conditions is not covered by the warranty, but can be repaired if you pay the cost

(1) Exceeding the warranty period;

(2) Damage caused by unauthorized disassembly or repair without the authorization of our company;

(3) immersed in water and the circuit board was burnt;

(4) Damage caused by improper installation, use, maintenance or storage;

(5) damage of outer casing caused by the improper use;

(6) The IMEI(SN) number of the product is torn or blurred;

(7) The warranty card and product model No. not match, or the warranty card was altered;

(8) Damage caused by force majeure.

Certificate

Certificate

The product is approved to leave the factory after passing the inspection

Model: _____

Checker: _____

Date: _____

Manufacturer

Company Headquarters:

Production base:

Company Website:

Service Hotline: