
Strong magnet tracker

Product instruction manual

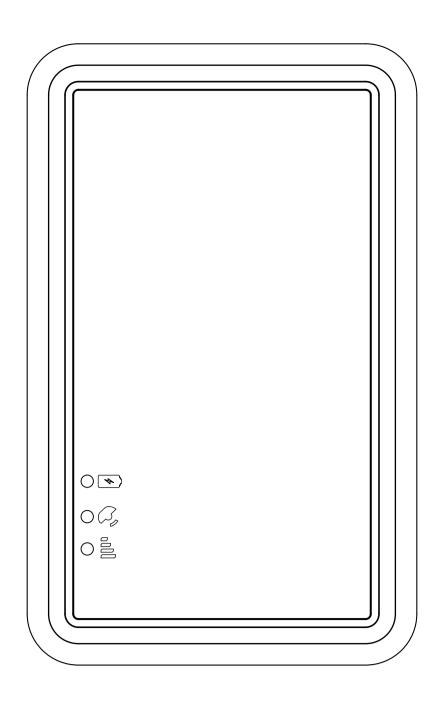

(Strong magnet tracker)

Please read the instructions carefully before using this product. This product is only used to assist the company or personal vehicle management, anti-theft and other legal purposes, prohibited for detective, tracking and other illegal activities that violate others' privacy.

I. Product introduction

- 1.Name: Strong magnet tracker
- **2.Feature:** Position query, electronic fence, Alarm, track playback. (All functionsare subje ct to the actual model).
- **3.Use:** Car rental, financial risk control, logistics management and other industries

4.Configuration list:

Number	Name	Quantity	Unit
1	Strong magnet tracker	1	set
2	Instruction manual, warranty card, certificate of qualification	1	set
3	Packing box	1	suit

Note: The above is the standard configuration list of the whole set of products. Accessories outside the above standard range of need to pay extra.

5.Matters needing attention:

- (1) Do not immerse the product in water.
- (2) Please keep the product away from extreme environments such as fire, high temperature and heat.
- (3) The shape and color of the equipment shall prevail.
- (4) It is strictly prohibited to disassemble, repair and modify products without permission.

II. Specification parameter

1. Main specifications:

	Main specification	
Master chip	4G module	
Frequency	4G	
Voltage	3.4-4.2V DC	
Battery	Polymer battery: 1200mAh	
Antenna	GPS ceramics and FPC	
Shell	Fireproof material	
Main interface	Type-C	
SIM card	Nano Push self-ejecting cassette	

2. Main functions:

	Main function
AGPS	Support
Positioning	Support
Playback	Support
Electronic fence	Support
Alarm message	Support
Vibration alarm	Support
Short message	Support
AGPS	Support

III. Installation method

1.Procedure of use:

- Open the card slot and insert the SIM card that supports GPRS Internet access.
- Press and hold the power button for 3 seconds to power on the device. When you see the indicator light on and the blue light blinking quickly and the green light blinking frequently, it indicates normal.
- Log in to the mobile APP or website to check the location.

2.Light status (On the device):

(1) GPS singal light (Green)

Light	Status
Glowing	GSM no positioning
Flashing	GPRS normal communication/online

(2) Network light (Blue)

Light	Status
Glowing	No signal found or the SIM card is invalid
Flashing	Quick blink: The system is working properly Blinking slowly: The server is not connected or there is no GPRS network

(3) Charge light (Red)

Light	Status
Glowing	The device is being charged
Extinguish	Charge complete

IV. Common problem

Common problems	Reasons	Solutions
Weak signal	Test at areas where there are high buildings or under- ground parking lots, where radio waves cannotbe sent or eceived normally.	Move to good signal The regional location used
Platform map	GPS no location	go to outdoor place where signal is good
shows incorrect location	Inaccurate positioning	The GPS signal is weak in some areas, and the terminal will switch different positioning modes. The positioning difference is normal
The device and	Check whether the SIM card is normal	Contact your provider to check the status of your SIM card
platform are not connected	The SIM card is normal, but the terminal is offline	Please try to observe the status in the strong signal area

Notes:


- The equipment should be placed in a place with good GPS signal;
- 2) The equipment should be placed in a place that is not easy to corrode (waterproof measures);
- Do not place the device directly in a place where the temperature is too high, such as: heat dissipation Near a pipe or exhaust port;
- 4) Ensure that the host face up, and there is no metal above the GPS signal shielding;
- Do not fix the device on the controller, to avoid excessive temperature, battery expansion and shell deformation;
- 6) The equipment can not be suspended in the air in the position of long-term vibration, can be fixed with cable tie or double-sided tape.

V. Installation position


Installation position: Car

Behind the windshield


Around the instrument panel

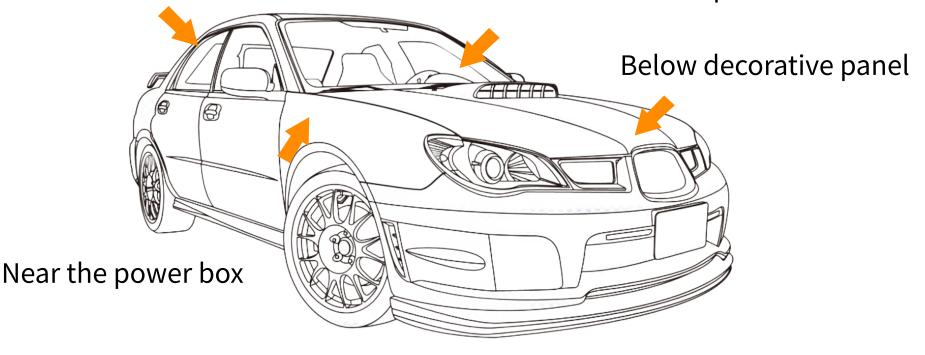

Installation position: Motorcycle

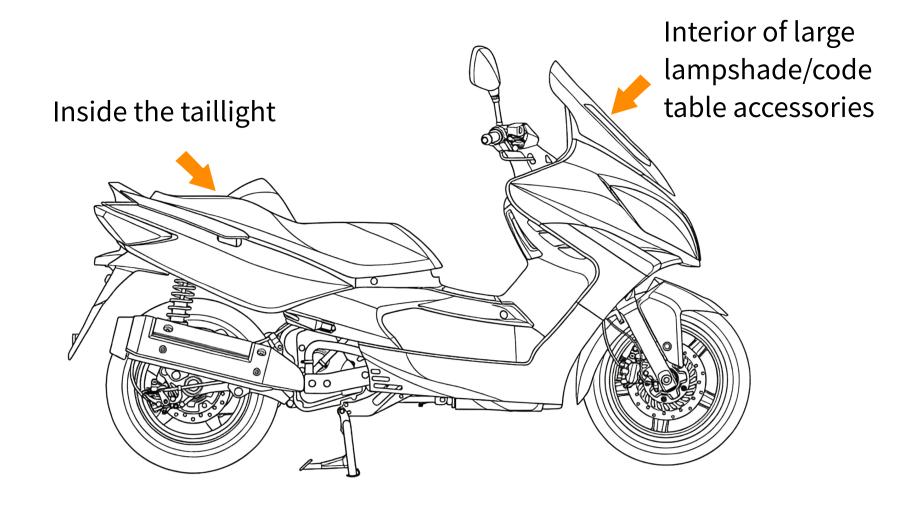

Installation position: electromobile

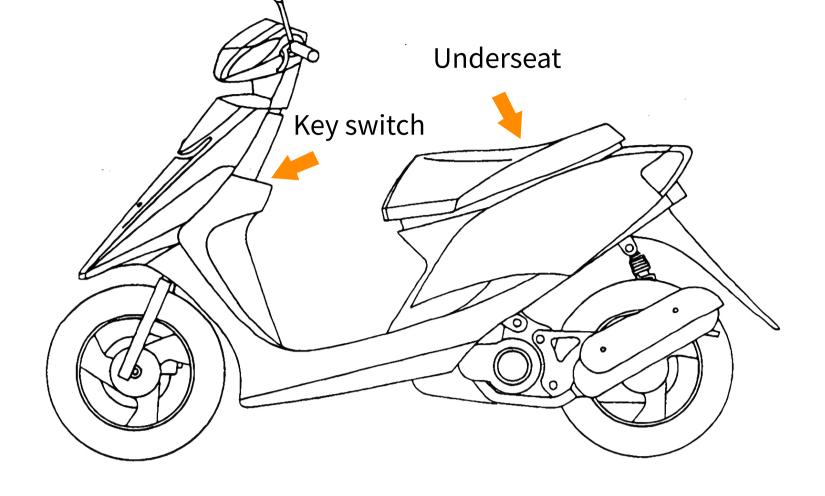

Warranty Card

User Name		Telephone Number	
Address			
Model No.		IMEI(SN)	
Purchasing Date		Commercial invoice No	
Seller Name			
Seller Address			
Seller contace number			
failure is gua 2. Any of the fo but can be re (1) Exceeding to (2) Damage can the authorizato (3) immersed io (4) Damage can	om the date of purch aranteed for one yea ollowing conditions i epaired if you pay th the warranty period; used by unauthorize ion of our company; in water and the circ used by improper in	r; is not covere e cost ed disassem uit board wa	ed by the warranty, bly or repair without as burnt;
storage;			

(5) damage of outer casing caused by the improper use;

(6) The IMEI(SN) number of the product is torn or blurred;

(7) The warranty card and product model No. not match, or the warranty card was altered;

(8) Damage caused by force majeure.

Certificate

C	ertificate
leave th	duct is approved to e factory after pass- the inspection
	del: cker:
Dut	

Manufacturer

Company Headquarters: Production base: Company Website: Service Hotline: