4G GPS tracker Product instruction manual

Please read the instructions carefully before using this product. This product is only used to assist the company or personal vehicle management, anti-theft and other legal purposes, prohibited for detective, tracking and other illegal activities that violate others' privacy.

(Suitable for 4G cable models)

1.Name: 4G GPS tracker 2.Feature: Position query, electronic fence, vibration alarm, track playback. (All functions are subject to the actual model) 3.Use: This product is only suitable for legal purposes such as anti-theft management of

vehicles owned by enterprises or individuals.

4G GPS tracker

Extension cable

It is prohibited to modify or for illegal activities.

Unit

set

set

suit

set

Quantity

1

1

1

4. Configuration list: Number Name

1. Product introduction

Instruction manual, warranty 2 card, certificate of qualification 3 Packing box

products without permission.

1. Main specifications:

Frequency

Voltage

Working current

G-sensor

Positioning

Electronic fence

installation diagram)

(1) GPS singal light (Green)

Light

Glowing

Flashing

Light

Glowing

Flashing

Weak signal

Platform map

shows incorrect

location

The device and

platform are

not connected

12V relay

87a

85

Red:Positive

Note:

(2) Network light (Blue)

Playback

II. Specification parameter

4

Note: The above is the standard configuration list of the whole set of products. Accessories outside the above standard range of need to pay extra. 5. Matters needing attention: (1) Do not immerse the product in water. (2) Please keep the product away from extreme environments such as fire, high temperature and heat.

(4) It is strictly prohibited to disassemble, repair and modify

(3) The shape and color of the equipment shall prevail.

Main specification 4G module Master chip

4G

9-90V DC

< 300mA

Support

Support

Support

Support

GPS ceramics and FPC Antenna Note: This product is only supported within the voltage range, beyond

the voltage range, will lead to serious consequences.

- 2. Main functions: Main function
 - SIM micro SIM **GPS** GPS+BD

The card is powered on automatically. The indicator light

is on and the blue light blinks, indicating that is normal.

Log in to the mobile APP or website to check the location.

Status

GSM no positioning

GPRS normal communication/online

Status

No signal found or the SIM card is invalid

Quick blink: The system is working properly

Blinking slowly: The server is not connected

or there is no GPRS network

Take out the terminal and accessories and connect the

terminal to the vehicle in the correct way. (Attached

2.Light status (On the device):

L					
	Alarm message	Support			
	Battery display	Support			
	Vibration alarm	Support			
III . Installation method					
1.Procedure of use:					
• Open the card slot and insert a SIM card that supports Internet access.					

IV. Common problem

the consequences arising therefrom shall be borne by oneself.						
Common problems	Reasons	Solutions				

Test at areas where there

are high buildings or under-

ground parking lots, where

radio waves cannotbe sent

or eceived normally.

Inaccurate positioning

Check whether the SIM

The SIM card is normal,

but the terminal is offline

card is normal

GPS no location

The main function of the relay is to control the remote switch.

The correct installation of the equipment is the premise of the

normal use of the equipment, incorrect installation will lead to

the equipment can not be used, so if you can not complete the

use the power off function, such as use may cause accidents.All

Move to good signal

The regional location

used

go to outdoor place

where signal is good

The GPS signal is weak

in some areas, and the

modes. The positioning

terminal will switch

different positioning

difference is normal

Contact your provider

to check the status of

Please try to observe

the status in the strong

your SIM card

signal area

installation, you need to ask a professional teacher to install.

• When the vehicle is driving at high speed, please be careful to

V. Installation instructions		
The device	e has four lines, the colors are red, black, green and yellow	
	Red: Positive poles Black: Negative poles Green: ACC - Connect the electric door lock "ON" Yellow: Cut off oil/power cord - standby function	

Note: If the oil cut-off/power off function is not required, this

Yellow: Cut off oil/power cord

ON

OFF

Fuse wire: 2A

line docking battery positive pole.

VI. Installation position

Installation position: Car

line of the locator.

Behind the windshield

Near the power box

Find the connection line between the vehicle igniter

connect with the relay 30, 87a line docking relay 85

Finally, connect the 86 line of the relay with the yellow

and the high pressure pack, cut it, and then respectively

Green: ACC

12V accumulator

Around the instrument panel

Negative

Black: Negative

Red:Positive

Below decorative panel

Positive

 \oplus

function needs to be connected to the relay to achieve

Installation position:	Motorcycle
Inside the taillight	Interior of large lampshade/code table accessories
Installation position:	electromobile
Key switch	Underseat

Date:

Seller Name				
Seller Address				
Seller contace number				
1. One year from the date of purchase, the non-human damage				
failure is guaranteed for one year; 2. Any of the following conditions is not covered by the warranty,				
			but can be repaired if you pay the cost (1) Exceeding the warranty period;	
(2) Damage caused by unauthorized disassembly or repair without				
the authorization of our company; (3) immersed in water and the circuit board was burnt; (4) Damage caused by improper installation, use, maintenance or storage; (5) damage of outer casing caused by the improper use;				
			(6) The IMEI(S	N) number of the product is torn or blurred;
			(7) The warrai	nty card and product model No. not match, or the

Certificate

Certificate

The product is approved to

leave the factory after pass-

Warranty Card

Telephone

Number

IMEI(SN)

Commercial

invoice No

warranty card was altered; (8) Damage caused by force majeure.

User Name

Address

Model No.

Purchasing

Date

Checker:

Manufacturer

Company Website:

Service Hotline:

ing the inspection Model:

Company Headquarters: **Production base:**